

NB! The guarantee for Magnor products is only valid when the products have been assembled according to regulations.

ASSEMBLY OF WINDOWS

BLOCKS FIXED FRAME WINDOW

15cm → | Under: Two blocks 15 cm from each side

B LOCKS TRANSOM WINDOW

Under: One extra block under each mullion

B LOCKS OPENING WINDOW

Under: Position the blocks all the way into the corners

BLOCKS COMBINATION WINDOW

15cm → | Under: Position the blocks all the way into the corners, with two extra blocks 15 cm from the corners.


- Check level and plumb, and distance between opposite screws.
- Attach with screws, fittings or adjusting screws.
- If using expanding foam, the window must be reinforced before applying the foam.

BLOCKS EXTRA LARGE WINDOW

15cm → | Max. 140 cm

Extra blocks as required. Max. 140 cm block distance.

ASSEMBLY OF WINDOWS AND DOORS

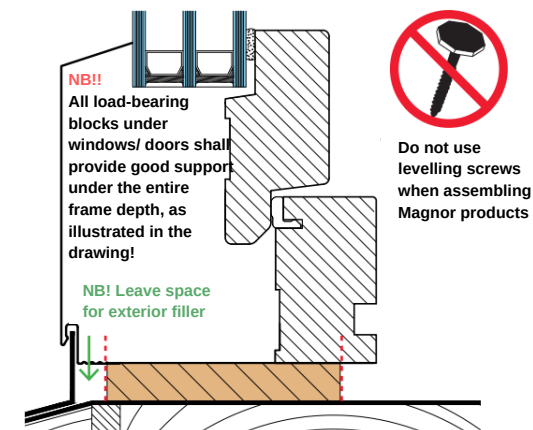

This product has been treated with impregnation: (Reg by Biocides Regulation 528/2012, PT8) GORI 356

Products treated with GORI 356 contain biocides approved for product type 8. Products treated with GORI 356 are protected against wood-destroying or discolouring fungi. Products treated with GORI 356 contain the following biocides: Propiconazole, Tebuconazole, IPBC. Products treated with GORI 356 contain the following nano-materials: - The wood preservative GORI 356 is produced by: Teknos A/S, Industrivej 19, DK-6580 Vamdrup Tel.: +45 76 93 94 00 Special precautions for products treated with GORI 356. In order to protect aquatic organisms, do not use the treated wood near aquatic environments (rivers, streams, lakes etc.). The surface of the wood must be primed, stained or painted. Coating of the surface must be carried out at regular intervals.

ASSEMBLY OF DOORS



The products must be kept dry prior to installation. If you are covering the products, remember to keep them ventilated!

1 Place door on blocks, max. spacing 20 cm. For doors with wheelchair-friendly threshold, it is recommended to have a compact surface.

2 Check level.

3 Fit side blocks.

4 Check plumb.

5 Check that distance between opposite screws is equal.

6 Attach the side frames with screws, fittings or adjusting screws. If using expanding foam, the door must be reinforced before applying the foam.

7 Insert a long screw (5 x 90 mm) in every hinge in the frame where there are empty holes. The screw shall penetrate the frame and screw into the wall.

Opening windows/ doors require FUNCTION TEST after assembly.



H-vinduet Magnor As, 2240 Magnor, 13
 YE 2013-HVM CE-001/C-002/C-003/C-004/C-005
 Reference number on performance declaration NS-EN 14351-1 : 2006 + A1 2010
 Built as reference window/door type: Window/door for use in exterior wall on buildings.

MagnorVinduet
 Bedre får du ikke

Tel.: +47 55 11 29 70 - Email: post@hvm.no
 www.magnorvinduet.no